

User Instruction Manual

Humidity Controller Model TAC802-5

How to change a Setting?

Press Program Button **5** seconds enter default password (**996**)

How to put password?

Press down button display =**9** then press Enter press down button display =**99** press Enter

Press Up button 6 times display =**996** press enter

Factory setting:

Power up controller and press UP down immediately within 5 seconds

S/No	Code	Description
1	Hon	Enter here Humidifier On Value
2	HoF	Enter here Humidifier Off value
3	HAL	Enter here High Humidity Alarm
4	LAL	Enter here Low Humidity Alarm
5	Ton	Timer On time if required When Use Hon/HoF ton must be 0 0.1=10 seconds
6	ToF	Timer Off time if Required When Use Hon/HoF of must be 0
7	dto	Delay time for Pump 0.1 =10s econds if necessary
8	H-d	0 = humidifier , 1 =Dehumidifier When use as dehumidifier Hon must be higher then Hof
9	NoS	Enter here Number of Sensors for Alarm
10	C-F	0 =centigrade , 1 = Fahrenheit
11	dry	Calibration of average dry sensors
12	UEt =Wet	Calibration of average Wet sensors
13	CAL	Calibration of Humidity % use one option (dry,UEt) or CAL
14	Zone 1,2,3	Press Enter/Zone to see zone1 temp press enter /zone to see zone2 Press enter/zone to see zone 3 temperature and humidity
15	Alarm	Regular alarm indicate High or Low Humidity Alarm
16	Zones LED	Zone 1-3 LED blink when sensor open Periodically Alarm indicate sensor open OP1-OP4 indicate sensor open